

# AR950

## APAR transmitters programmer



Ordering procedure  
AR950

- autonomous programmer for configuring AR5xx series transmitters and AR921 switch
- power supply via USB cable from programmed device
- displaying current measurement value, preview and edition of parameters
- programming input type, alarms and all other configuration data
- hand-held casing IP20
- dimensions 57x92x25,4 mm
- USB connection cable of 1.5m included
- rated operating conditions 0÷65 °C, 0÷90%RH

# AR955

## APAR devices programmer



Ordering procedure  
AR955

- set for programmable configuration of APAR devices using PC
- ARsoft-CFG software included for Windows
- programmer power supply from USB port
- displaying current measurement value, preview and edition of parameters
- programming input type, alarms and other parameters
- drivers for Windows XP, Vista, 7, 8
- cable length 1.0m
- rated operating conditions 0÷65 °C, 0÷90%RH

# AR956

## APAR devices programmer with function of transmitter power supply



Ordering procedure  
AR956

- set for programmable configuration of APAR devices using PC
- ARsoft-CFG software included for Windows
- power supply for the programmer and **programmable converter** (series: AR59x, AR58x, AR55x) from the computer's USB port
- displaying current measurement value, preview and edition of device parameters
- programming input type, alarms and other configuration parameters
- drivers for Windows XP/Vista/7/8, Linux, MAC OS
- cable length 1.8m
- rated operating conditions 0÷65 °C, 0÷90%RH